

## Mark's Basic Cheat Sheet FT 60 ver5

### Switch between Memory Channel mode and VFO (tuning) mode

Memory Channel mode has ### upper left corner screen  
Press **[V/M]** key to switch

### VFO mode :

To Enter Freq. - enter 000.000

### For Memory Channel Mode :

Enter – #### then press **[F/W]**

### In VFO, to Save Frequency

Press and hold **[F/W]** for 1 sec, ### start flashing  
**Rotate Knob** to select Memory channel,  
Press **[F/W]** to save.

### To Save a Frequency with a Tone

Save a Frequency as above

*Then Press **[F/W]** then **[1]***

***Rotate Knob** and select <tone>*

*Press **[PTT]** to enter*

*Then press **[F/W]** then **[2]***

***Rotate knob** to select frequency*

*Press **[F/W]** to save*

Press and hold **[F/W]** for 1 sec, ### start flashing  
**Rotate Knob** to select Memory channel,  
Press **[F/W]** to save.

### Enter a Different Transmit from Receive.

Save a Receive Frequency as above and  
record the memory channel ###

In VFO mode, enter Transmit Freq., 000.000,

*If tone needed, then Press **[F/W]** then **[1]***

***Rotate knob** and select <tone>*

*Press **[PTT]** to enter*

*Then press **[F/W]** then **[2]***

***Rotate knob** to select frequency*

*Press **[F/W]** to save*

Press and Hold **[F/W]** for 1 sec.

Rotate knob to same memory channel ###

**Press and Hold [PTT] ,**

**While still holding [PTT], Then press [F/W]**

### To Lock Radio

Press **[F/W]** then **[6]** to lock

Padlock will appear on screen when locked

Then press **[F/W]** then **[6]** to unlock

### To Change Transmit Power

Press **[F/W]**, then **[3]**

Then rotate knob to select power level

Press **[PTT]** to enter

### Tone Scan

With frequency on screen,

Enable tone operation, Press **[F/W]** then **[1]**

**Rotate Knob** and select <tone>

Press **[PTT]** to enter

Press **[F/W]** then **[2]**

Press and hold **[▲MHz]** or **[▼MHz]** to start scan

Press **[F/W]** to lock in tone

Press **[F/W]** to return

### Banks (Memory Mode)

Press and hold **[Band]** for 1 sec.

**Rotate Knob** to Select 1 thru 10 or No Bank

Press **[V/M]**

### Assign Memorized Freq to a Bank

Recall Memorized freq. To display

Press and hold **[Band]** for 1 sec.

**Rotate Knob** to Select Bank 1 thru 10

Press and hold **[V/M]** for 1 sec.

### Remove Memorized Freq from Bank

Recall Memorized freq. To display

Press and hold **[Band]** for 1 sec.

Press **[F/W]**

### Scanning Frequencies

Select in **Bank** or **Memory** or **VFO**

Press and hold **[▲MHz]** or **[▼MHz]** for 1 sec

Will stop and hold during transmission

The decimal point will flash during scanning

Use **[PTT]** to terminate scan

It will not transmit until scanning is terminated

### To Delete a Frequency

Press and hold **[F/W]** for 1 sec– ### start flashing

**Rotate Knob** to select Memory location for deletion,

Press **[HM/RV]** to delete.

### Ensure that “Wires” is off

If small nuclear symbol is in upper right corner of the display, Press **[0]** to switch off